



SPARKY600X

MACCHINA FONTANA SCINTILLE DMX 600W



USER MANUAL

www.timpani.it



» Parameter :

Input:	AC200V-240V 50/60Hz . AC100-120V 50/60Hz	Control :	DMX512-2CH/Wireless Remote
Power:	600W	Heigh :	2-5m (adjustable)
Consumable:	Composite Ti Large/ Middle	Package Size:	270 x 250 x 330mm
Machine Size :	208 x 186 x 247mm	G.W. :	9.5Kg
N.W. :	7.5Kg	Consumable Rate :	20g/min
Capacity :	130g		

» Security Considerations :

1. Keep dry and NOT USE in rain or snow.
2. People and flammable materials should maintain a minimum safe distance of 3 meter.
3. Clear material for Spark Machine is necessary both before the show and after the show.
4. Cover of nozzle of Spark Machine is prohibiting.

» Operation :

After turn on machine, it will automatically preheat around 5 minutes, when the "READY" green light turns from flashing into long on, indicates that the machine is ready to work.

Wireless remote control mode :

A KEY:STOP ; B KEY: Fast Jet ; C KEY: Slow Jet ; D KEY : CLEAR.

If the remote control cannot work, please check whether wireless function was turn on.

Press MENU to switch to wireless control setting , menu is set to "On" , press "ENTER" .

This interface can also be matching code with remote controller.

When using the DMX controller, the system takes 2 channels :

The First channel :

0- 15 Jet OFF ; 16- 255 Jet On ,Height adjustable.

The second channel :

60- 80 Clear Material ; 20- 40 Emergency Stop, Pre-heat OFF.

» Setting interface :

Press "MENU" to switch interface ; Press "ENTER" Confirm and save parameters.

Options	Range	Instructions
Set DMX Address	1-511	Set the DMX address.
Remote	On/Off	Wireless function switch. you can match code When shows "ON".
Manual Jet	On/Off	Manual Jet , for testing purposes only.
Jet Height	1-10	Manual Jet Height , for testing purposes only.