

BUBBLY100

Small-size bubble Machine

User Manual

Place the machine horizontally. Put 1 liter bubble liquid into the container.

Switch on and start.

Technology Parameter	
Voltage	AC220V~240V 50Hz
Duration	30min
Container Volume	0.75L
Area of Coverage	50 m ²
Size (min)	300x200x230mm (LxWxH)
Weight (Kg)	2









Timpani S.r.l. Via Idiomi 1/42 - 20090 Assago MI



timpani.it











info@timpani.it